

Multimedia Rack User MANUAL for the Red Room



1. Unlock and Open the Rack.

2. Projector is placed on an appropriate stand. - **Fig.1.**

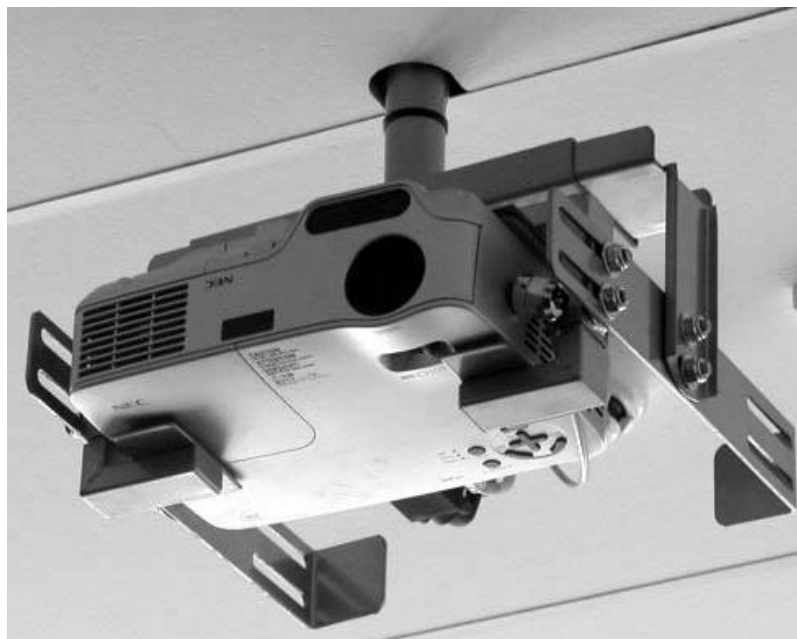


Fig.1

3. Take out the necessary remote controls of the devices - Fig.2.



**Remote control for
the NEC Projector**

**Remote control for
the LG Video player**

**Remote control for
the DENON Receiver**

**Remote control for
the DENON DVD player**

Fig.2

1. How to use the Computer



Fig.1.1

Switch the computer ON/OFF

1.1. Switch on the Computer with the Power button - **Fig.1.1.**

1.2. Switch on the LCD monitor.

1.3. Log-in on the computer using your own account and the appropriate domain.

1.4. To show the picture on the white screen:

- Switch on the Projector – select the button **ON** from the remote control of the Projector (**Fig.1.2**)
- Select the source: use the remote control of the Projector and click on button **COMPUTER** (**Fig.1.3**)

1.5. Be sure that the Video Switch device shows who green lights- **Fig. 1.4.**

1.6.

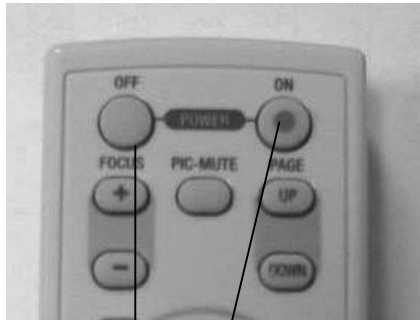


Fig.1.2 OFF ON

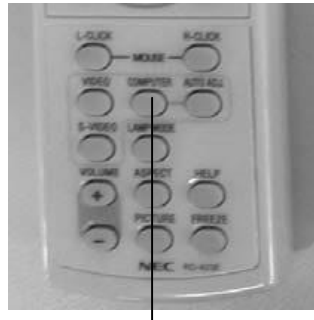



Fig.1.3 Select COMPUTER



Fig.1.4 Video Switch

1.6. If you need to have **sound** during the usage of the computer:

- Switch on the Sound Suppressor under the Audio Mixer - Press the Power button (**Fig. 1.5**)

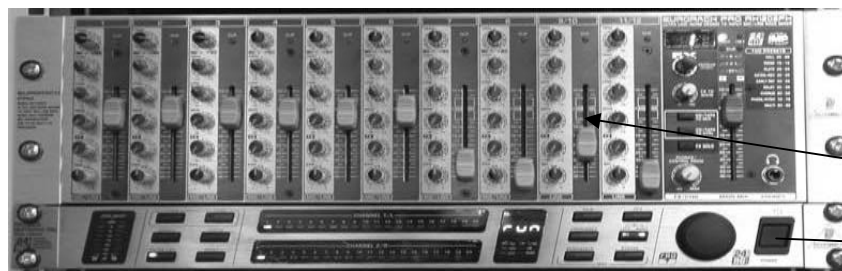

Audio Mixer and Sound Suppressor

To control Sound of the Computer

Switch ON/OFF

- Switch on the Receiver - **Fig.1.6.**

- Press the button **ON/STANDBY** - it should be in green

- Use the **Function** button and choose the **input AUX** which appears on the display of the receiver. You can control the sound volume with the **Master Volume** button.



ON/STANDBY

Function

Fig.1.6 Receiver

AUX input

Volume control

1.7. After you finish

Turn off the computer

- Switch off the monitor.
- Turn off the Receiver.
- Turn off the Projector (**Fig. 1.2**) – click twice on the button **OFF** on the **remote control** of the Projector.

2. How to use the DVD player



Switch the DVD player ON/OFF

Fig.2.1.

2.1. Switch on the DVD Player with the **POWER** button from the remote control OR from the device- **Fig.2.1.**

2.2. To show the picture on the white screen - use the remote control of the Projector and click on button **VIDEO** (**Fig.2.2**)

Select the source – VIDEO



Fig.2.2.

2.3. To have sound you need to switch on the Receiver - Fig.2.3.

- Press the button ON/STANDBY - it should be in green.
- Use the Function button and choose the input DVD/VDP which appears on the display of the receiver. You can control the sound volume with the Master Volume button.



ON/STANDBY Function

Fig. 2.3

DVD input


Volume control

2.4. Put the DVD disc in the DVD player and use the necessary buttons on the DVD player or on the remote control to **PLAY**, **STOP** or **PAUSE**.

2.5. **After you finish**

- Turn off the Receiver.
- Turn off the Projector (**Fig. 2.3**) – click twice on the button **OFF** on the **remote control** of the Projector.
- Turn off the DVD player.

How to use the Video player

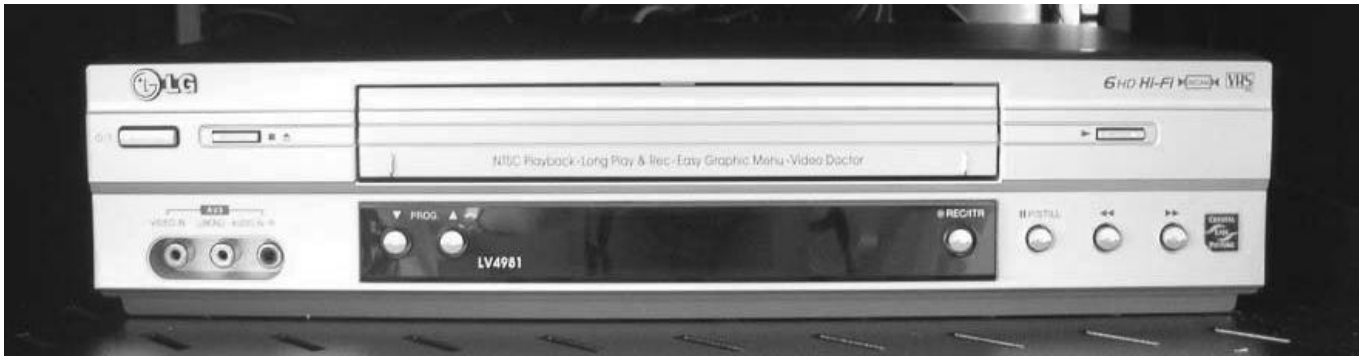

3.1. Switch on the VCR Player with the POWER button from the remote control of the LG VCR player
OR from the device.

3.2. To show the picture on the white screen - use the remote control of the Projector and click on button VIDEO (Fig.3.1)

Select the source – VIDEO



Fig.3.1.

3.3. To have sound you need to switch on the Receiver - Fig.3.2.

- Press the button ON/STANDBY - it should be in green.
- Use the Function button and choose the input VCR which appears on the display of the receiver. You can control the sound volume with the Master Volume button.



ON/STANDBY Input Selector Fig.3.2 VCR input Volume control

3.4. Put the cassette in the VCR player and use the necessary buttons on the VCR player OR on the remote control to PLAY, STOP or PAUSE.

3.5. After you finish

- Turn off the Projector – click twice on the button **OFF** on the **remote control** of the Projector.
- Turn off the Receiver.
- Turn off the VCR player.

4. How to use an additional LAPTOP

4.1. Switch on the Laptop.

4.2. Insert the video cable in the Laptop - **Fig.4.1**

4.3. If you need an Internet connection - please refer to AUBG procedure.



Insert the cables in the appropriate inputs of the Laptop

Fig.4.1



4.4. To show the picture on the white screen:

- Switch on the Projector – select the button **ON** from the remote control of the Projector - **Fig.4.2**.
- Select the source: use the remote control of the Projector and click on button **COMPUTER** - **Fig. 4.2**


4.5. Be sure that the Video Switch device shows two orange lights- **Fig. 4.4**.



OFF
ON
The Projector
Fig.4.2



select the source
- COMPUTER
Fig.4.3

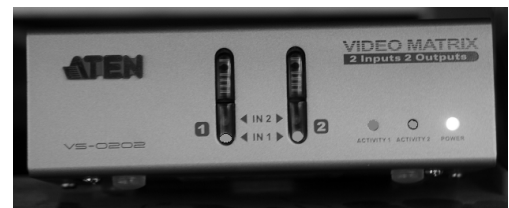

Video Switch
Fig.4.4

4.6. If you want to have **sound** during the usage of the LAPTOP, you need to connect additional Speakers. You can not use the sound system in the MM Rack.

4.7. After you finish

- Turn off the Projector (**Fig. 4.2.**) – click twice on the button **OFF** on the **remote control** of the Projector.
- Turn off the Receiver.
- Turn off the computer and unplugged the LAN and Video cables.

5. HOW TO USE THE MICROPHONES

5.1. Switch on the Sound Suppressor - press the Power button (Fig.5.1)

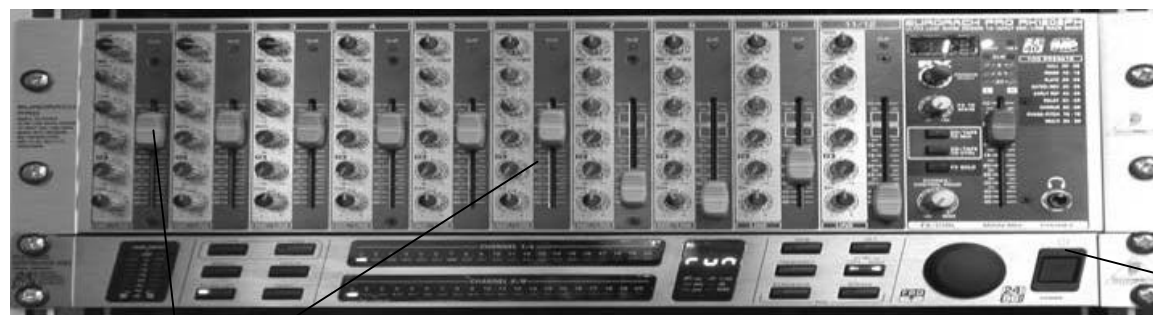


Fig.5.1
Audio Mixer
and
Sound Suppressor
Switch ON/OFF

Volume control:

Slide 1 to 3 - for Microphones on stand
Slide 4 to 6 - for Wireless microphones
slide 9 - to control sound of the computer

5.2. Switch on the Receiver (Fig.5.2)

- Press the button ON/STANDBY - it should be in green.
- Use the Function button and choose the input AUX which appears on the display of the receiver. You can control the sound volume with the Master Volume button.



ON/STANDBY Function Fig.5.2 AUX input Volume control

5.3. Wireless microphones - there are available 3 microphones

- Take out the microphone - Fig.5.3
- Stick on your cloths.
- Switch on the microphone- Fig. 5.4.



Fig.5.3



Fig.5.4 Switch ON/OFF

5.4. Microphones on Stand - there are available 3 microphones

- Take out the microphone and put on the stand Fig. 5.5 and Fig. 5.6
- Switch on the microphone - Fig. 5.6



Fig.5.5



Fig.5.6 Switch ON/OFF

5.5. Control the Volume of each microphone using the proper slide on the Audio Mixer - Fig.5.1

For wireless microphones - The number that is marked
on the back of microphone responds to the slide number on Audio Mixer.
For microphone on stand - The number of the stand cable responds
to the slide number on Audio Mixer.

5.6. After you finish:•Switch off all devices; • Switch off and take in the microphones.